VITA GESSI

QUICK INFORMATION

1. Press the dial of the selector **to start.**

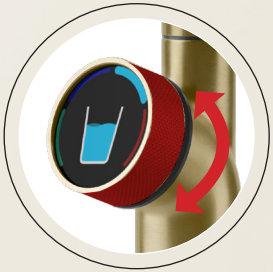

2. Turn the dial left or right **to select the desired water.**

3. Once the desired water is selected **press to dispense.**

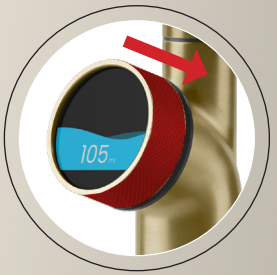

4. Press again to stop the dispensing.

COLD WATER

HOT WATER

Sparkling Water min. level

Sparkling Water med. level

Sparkling Water max. level

Chilled Water

Fresh Water

Cold Water

Heated Water

Boiling Water
(Push & turn the lock ring to unlock)

Video **Instructions**

Settings

Pressing and releasing the dial from the settings menu provides access to **settings menu options.**

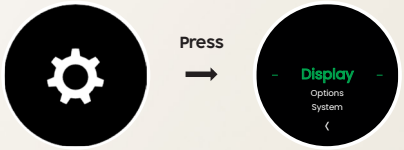

Turning the dial counter clockwise switches to the screen with the **status of the consumables.**

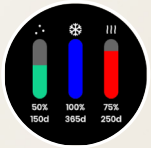

Advanced Functionality

From any selected water icon, **press and hold the dial to go to the volume setting menu.**

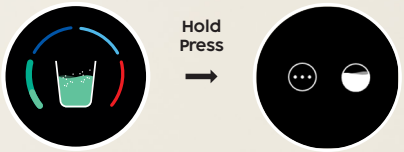

3 Water Type Memories

Water Quantity Selection

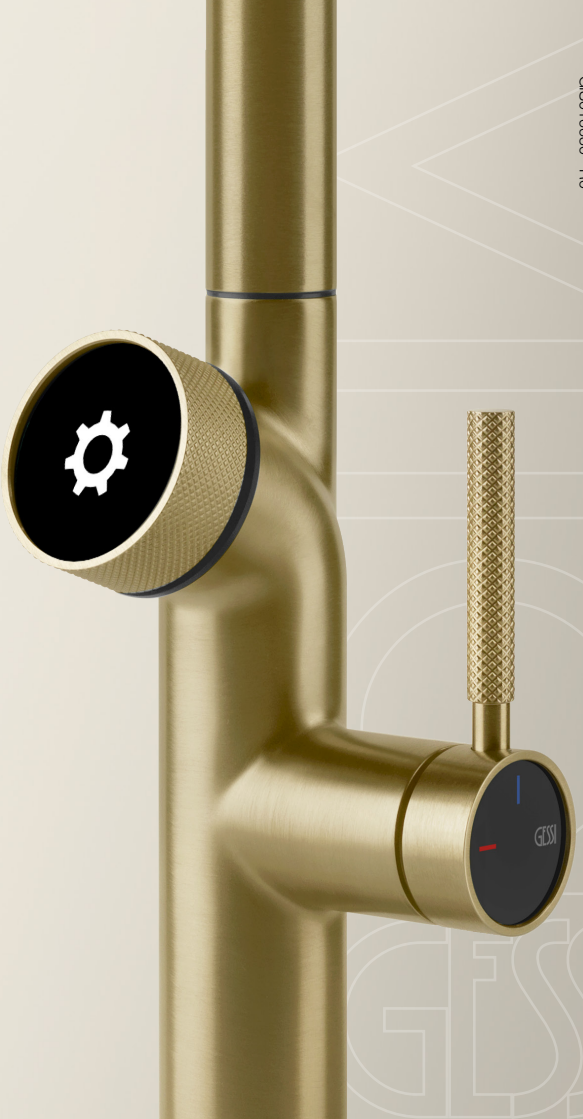

GIS016630 - R0